

Work Order ID 88950

Saturday, August 11, 2012 12:41:08 PM

88950

Page 1

Item ID: D350-591-122

Accept

N900040100

Setup Start ***NS1***

Revision ID:

Stop ***NS2***

Item Name: Heli-Access-Step, RH

Start Date: 8/13/2012 Start Qty: 4.00 ***4***

Cust Item ID:

Required Date: 8/24/2012 Req'd Qty: 4.00 ***4***

Customer:

Reference:

Approvals: Process Plan: MLJ Date: 12/08/13 Tooling:

Date:

QC: Date: SPC (Y/N):

Date:

Run Start ***NR1***

Stop ***NR2***

Sequence ID/ Work Center ID	Operation Description	Set Up/ Run Hours	Tool ID	Tool #	Plan Code	Accept Qty	Reject Qty	Reject Number	Insp. Stamp
--------------------------------	--------------------------	----------------------	---------	--------	--------------	---------------	---------------	------------------	----------------

Draw Nbr	Revision Nbr
D2351	E

100

100

DC

Document Control

DOCUMENT CONTROL

Memo

Photocopy bluefile and type labels as per PPP D350-591-122 CHG005

0.00

0.00

110

110

Large Fab

Large Fab

Large Fab

Memo

1-Cut D2244-116 extrusion to 55.32" long as per Dwg D2351 using cutting table setup DT8185-G
2-Drill extrusion per Dwg D2351 using Jig DT8230 for rivets.

0.00

0.00

130

130

CNC Bend 1

CNC Delta 100 Bender

BENDING MACHINE - SKIDTUBES

Memo

Bend as per dwg D2351-042 using cnc bender and Folio FT 012. Use bend prog. D2351-042.

0.00

0.00

4 Jd MLJ 12-11-6
(4)

4 *[Signature]* 12.10.23

ac 12/10/29

Work Order ID 88950

Saturday, August 11, 2012 12:41:08 PM

88950

Page 2

Item ID: D350-591-122

Accept

N900040100

Setup Start ***NS1***

Revision ID:

Item Name: Heli-Access-Step, RH

Stop ***NS2***

Start Date: 8/13/2012 Start Qty: 4.00 ***4***

Cust Item ID:

Required Date: 8/24/2012 Req'd Qty: 4.00 ***4***

Customer:



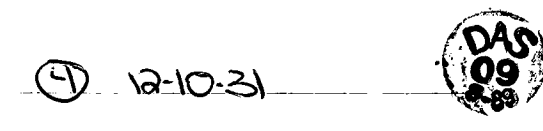
Reference:

Approvals: Process Plan: _____ Date: _____ Tooling: _____ Date: _____

Run Start ***NR1***

QC: _____ Date: _____ SPC (Y/N): _____ Date: _____

Stop ***NR2***

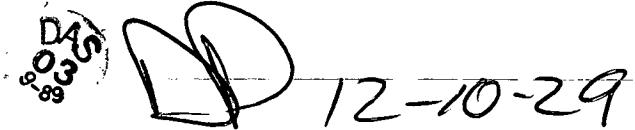Sequence ID/ Work Center ID	Operation Description	Set Up/ Run Hours	Tool ID	Tool #	Plan Code	Accept Qty	Reject Qty	Reject Number	Insp. Stamp
140 *140* QC Quality Control	QC5- Inspect part completeness to step on W/O Memo	0.00 0.00							
150 *150* Large Fab Large Fab	Large Fab Memo 1-Bevel Fwd and Aft end for welding 2-Weld Aft End Bracket per QSI 004 & Dwg D2351 using Welding Jig DT8033 A/RAluminum Rod <u>122431</u> 3-Do not Grind Flush	0.00 0.00							
160 *160* QC Quality Control	QC9- Inspect visual per QSI004- Fusion Welds Memo	0.00 0.00							

Work Order ID 88950

Saturday, August 11, 2012 12:41:08 PM

88950

Page 3

Item ID: D350-591-122 Accept ***N900040100*** Setup Start ***NS1***
Revision ID: Stop ***NS2***
Item Name: Heli-Access-Step, RH
Start Date: 8/13/2012 Start Qty: 4.00 ***4*** Cust Item ID:
Required Date: 8/24/2012 Req'd Qty: 4.00 ***4*** Customer:
Reference:

Approvals: Process Plan: Date: Tooling: Date: Run Start ***NR1***
QC: Date: SPC (Y/N): Date: Stop ***NR2***

Sequence ID/ Work Center ID	Operation Description	Set Up/ Run Hours	Tool ID	Tool #	Plan Code	Accept Qty	Reject Qty	Reject Number	Insp. Stamp
170 *170* QC Quality Control	QC5- Inspect part completeness to step on W/O Memo	0.00 0.00 DAS 15 9-89 12.10.31				4			
180 *180* HandFinish Hand Finishing	Chemical Conversion Coat per QSI005 4.1 Memo	0.00 0.00				4	26	12-10-1	
190 *190* QC Quality Control	QC5- Inspect Part Finish Memo	0.00 0.00				4x			12/11/01

Page 4

4 ϕ $\text{Ag } 12.11.0$
 $\text{H } 12.11.01$
 $\text{Ag } 12.11.02$

(4) 12-11-2

④ 12-11-2

Work Order ID 88950

Saturday, August 11, 2012 12:41:08 PM

88950

Page 5

Item ID: D350-591-122

Accept

N900040100

Setup Start

NS1

Revision ID:

Item Name: Heli-Access-Step, RH

Stop

NS2

Start Date: 8/13/2012 Start Qty: 4.00

4

Cust Item ID:

Required Date: 8/24/2012 Req'd Qty: 4.00

4

Customer:

Reference:

Approvals:

Process Plan:

Date:

Tooling:

Date:

Run Start

NR1

QC:

Date:

SPC (Y/N):

Date:

Stop

NR2

Sequence ID/
Work Center ID

Operation
Description

Set Up/
Run Hours

Tool ID

Tool #

Plan
Code

Accept
Qty

Reject
Qty

Reject
Number

Insp.
Stamp

250

Chemical Conversion Coat per QSI005 4.1

0.00

250

HandFinish

Memo

0.00

Hand Finishing

4X ~~Ø~~

m/f
12/11/05

260

White Gloss(Ref:4.3.5.1) per QSI005 4.3-Alum

0.00

260

Powdercoat

Memo

0.00

Powder Coating

START TIME:

11-15

OVEN TEMPERATURE:

FINISH TIME:

11-45

4X ~~Ø~~

m/f
12/11/05

270

Wing Walk as per dwg QSI005 4.4 Batch 122589

0.00

270

HandFinish

Memo

0.00

Hand Finishing

4 ~~Ø~~

BR 12-11-5.

m122878

Work Order ID 88950***88950***

Page 6

Saturday, August 11, 2012 12:41:08 PM

Item ID: D350-591-122

Accept

N900040100Setup Start ***NS1***

Revision ID:

Stop ***NS2***

Item Name: Heli-Access-Step, RH

Start Date: 8/13/2012 Start Qty: 4.00

4

Cust Item ID:

Required Date: 8/24/2012 Req'd Qty: 4.00

4

Customer:

Reference:

Approvals: Process Plan: _____ Date: _____ Tooling: _____ Date: _____

Run Start ***NR1***

QC: _____ Date: _____ SPC (Y/N): _____ Date: _____

Stop ***NR2***

Sequence ID/ Work Center ID	Operation Description	Set Up/ Run Hours	Tool ID	Tool #	Plan Code	Accept Qty	Reject Qty	Reject Number	Insp. Stamp
--------------------------------	--------------------------	----------------------	---------	--------	--------------	---------------	---------------	------------------	----------------

280

QC3- Inspect Part Finish

0.00

280

QC

Memo

0.00

Quality Control

290

Pick Kit

0.00

290

Packaging

Memo

0.00

Packaging

300

QC4- 100% Inspect kits for completeness

0.00

300

QC

Memo

0.00

Quality Control

DAS
15
8-89

b 1105

DAS
15
8-89

b 1106

4

4

4

12/11/06 J D
S

Work Order ID 88950

88950

Page 7

Saturday, August 11, 2012 12:41:08 PM

Item ID: D350-591-122

Accept

N900040100

Setup Start *NS1*

Revision ID:

Item Name: Heli-Access-Step, RH

Stop *NS2*

Start Date: 8/13/2012 Start Qty: 4.00

4

Cust Item ID:

Required Date: 8/24/2012 Req'd Qty: 4.00

4

Customer:

Reference:

Approvals: Process Plan: Date: Tooling: Date:

Run Start *NR1*

QC: Date: SPC (Y/N): Date:

Stop *NR2*

Sequence ID/ Work Center ID	Operation Description	Set Up/ Run Hours	Tool ID	Tool #	Plan Code	Accept Qty	Reject Qty	Reject Number	Insp. Stamp
--------------------------------	--------------------------	----------------------	---------	--------	--------------	---------------	---------------	------------------	----------------

310

0.00

310

Packaging

Packaging

Memo

0.00

Packaging

Identify and pack for shipping as per PPP D350-591-122 Location: 60 PPP Rev:

4.0

12/11/12

320

QC21- Final Inspection - Work Order Release

0.00

320

QC

Memo

0.00

Quality Control

12/11/12

MCS 12-11-07

Picklist Print

Saturday, August 11, 2012 12:41:08 PM

Page 1

Work Order ID: 88950
Parent Item: D350-591-122
Parent Item Name: Heli-Access-Step, RH

Start Date: 8/13/2012 Required Date: 8/24/2012
Start Qty: 4.00 Required Qty: 4.00

Comments: IPP Rev:E02.10.21Re-format; Incorporated D2351-041 IPPKJ/RF

Component Item ID/ Item Name	Replacement Item ID	Mfg/ Purch	Bin Item	Primary Location	Last Location	Route Seq ID	Unit of Measure	Qty on Hand	Qty per Kit	Total Qty	Qty Issued	Date Issued	Status
D2582 Step Leg Assembly		Manufactured	No				Each	2.0000		4			
				<u>Location</u>		<u>Loc Qty</u>		<u>Loc Code</u>					
				WA014		2							
				72828		2							
MS20600-AD4W3 Cherry Rivets		Purchased	No				Each	1,470.0000		64			
				<u>Location</u>		<u>Loc Qty</u>		<u>Loc Code</u>					
				311		582							
				122452		582							
				ST314		284							
				122151		284							
				ST321		471							
				111636		36							
				117601		3							
				118626		200							
				120308		232							
				WA018		133							
				107939		133							
D2244-116 Step Extrusion		Manufactured	No			110	Each	56.5000	0.5	2			
				<u>Location</u>		<u>Loc Qty</u>		<u>Loc Code</u>					
				WA		56.5							
				60307		2							
				80803		54.5							
D2850-2 End Cap		Manufactured	No			150	Each	7.0000	1	4			
				<u>Location</u>		<u>Loc Qty</u>		<u>Loc Code</u>					
				WA016		7							
				68489		7							

B86749 (x4)
Ac 12.11.01

Ac 12.11.01

64

Ac 12.10.23

2

Ac 12.10.29

4

Picklist Print

Saturday, August 11, 2012 12:41:08 PM

Page 2

Work Order ID: 88950

Parent Item: D350-591-122

Parent Item Name: Heli-Access-Step, RH

Start Date: 8/13/2012

Required Date: 8/24/2012

Start Qty: 4.00

Required Qty: 4.00

D2673-34 Manufactured No 220 Each 43.0000 1 4 12.11.01

End Plate

Location Loc Qty Loc Code

WA 43

84535 43

AN3-37A

Purchased No

290 Each 417.0000

Bolt

Location Loc Qty Loc Code

ST353 417

117619 4

119086 413

AN4-13A

Purchased No

290 Each 1,123.0000

Bolt

Location Loc Qty Loc Code

ST356 500

122416 500

ST357 623

120187 19

120770 12

121652 588

122063 4

AN960JD10

Washer

NAS1149D0363J

Purchased No

290 Each 0.0000

AN960JD416

Washer

NAS1149D0463J

Purchased No

290 Each 29.0000

Location Loc Qty Loc Code

ST351 29

116289 8

119097 21

Picklist Print

Saturday, August 11, 2012 12:41:08 PM

Page 3

Work Order ID: 88950

Parent Item: D350-591-122

Parent Item Name: Heli-Access-Step, RH

Start Date: 8/13/2012

Required Date: 8/24/2012

Start Qty: 4.00

Required Qty: 4.00

<div>D2230-1</div> <div>Lug</div> <div>SMB 4X</div>	Manufactured	No	290	Each	186.0000	<div>1</div> <div>89415⁴ ✓ JB</div> <div>SK</div>
	<u>Location</u>		<u>Loc Qty</u>		<u>Loc Code</u>	
	ST480		186			
	84136		186			
<div>D2230-3</div> <div>Lug</div> <div>SMB 4X</div>	Manufactured	No	290	Each	184.0000	<div>1</div> <div>90514⁴ ✓ JB</div> <div>SK</div>
	<u>Location</u>		<u>Loc Qty</u>		<u>Loc Code</u>	
	ST472		184			
	84134		184			
<div>D2856-400</div> <div>Abrasion Strip</div> <div>cut (1) at 7.20"</div> <div>SMB 4X</div>	Manufactured	No	290	f	202.4425	<div>0.6</div> <div>2.4 ✓ JB</div> <div>SK</div>
	<u>Location</u>		<u>Loc Qty</u>		<u>Loc Code</u>	
	ST403		96.998			
	81875		96.998			
	ST409		105.4445			
	63735		0.6696			
	68076		0.3149			
	71164		8.46			
<div>MS21042L3</div> <div>Nut</div> <div>SMB 4X</div>	Purchased	No	290	Each	3,345.0000	<div>2</div> <div>86905</div> <div>123265⁸ ✓ JB 12/11/06</div> <div>SK</div>
	<u>Location</u>		<u>Loc Qty</u>		<u>Loc Code</u>	
	316		831			
	122452		831			
	ST300		771			
	117885		32			
	119017		601			
	119075		138			
	ST317		1743			
	122141		1743			

Picklist Print

Saturday, August 11, 2012 12:41:08 PM

Page 4

Work Order ID: 88950

Parent Item: D350-591-122

Parent Item Name: Heli-Access-Step, RH

Start Date: 8/13/2012

Required Date: 8/24/2012

Start Qty: 4.00

Required Qty: 4.00

MS2104214
Nut

Purchased No

290 Each 5,460.0000

3 12/30/21 ✓ JB

SND 4X

Location	Loc Qty	Loc Code
314	5000	
122452	5000	
ST300	460	
104248	1	
116823	4	
119075	116	
121011	193	
121444	146	

D2732-030
Rubber Cushion
cut (2) at 3.00"

Manufactured No

290 Each 42.0000

2 8/35/20 ✓ JB

Sms 4X

Location	Loc Qty	Loc Code
ST402	2	
84498	2	
ST415	40	
88776	40	

AN4-16A
Bolt

Purchased No

290 Each 127.0000

2 12/33/21 ✓ JB 12/11/06

Sms 4X

Location	Loc Qty	Loc Code
ST357	63	
122416	63	
ST358	64	
120498	14	
121541	50	

DART

DESIGN KE	DRAWN BY RH	DART AEROSPACE LTD HAWKESBURY, ONTARIO, CANADA	
CHECKED #	APPROVED #	DRAWING NO. D2351	REV. E SHEET 1 OF 2
DATE 05.11.14		TITLE HIGH FLOAT STEP ASSEMBLY	SCALE NTS
A	95.02.15	NEW ISSUE	
B	97.05.22	END CAPS CHANGED	
C	97.07.23	ADDED BUSHING AND FACING INFO	
D	98.12.17	CHANGED TO BEND, D2850 REPLACES D2357 & D2358, INCORP. DEO 9084	
E	05.11.14	UPDATE FINISHING NOTE	

D2351 HIGH FLOAT STEP ASSEMBLY PARTS LIST




Part No.	Description	QTY -041	QTY -042
D2351-041	High Float Step Assembly (LH)	X	
D2351-042	High Float Step Assembly (RH)		X
D2244-55.4	STEP EXTRUSION*	1	1
D2582	STEP LEG ASSEMBLY	1	1
D2673-34	STEP END PLATE	1	1
D2850-1	END BRACKET	1	
D2850-2	END BRACKET		1
MS20600AD4W3	RIVETS	16	16

*cut per drawing


SHOP COPY
RETURN TO
ENGINEERING
UNCONTROLLED COPY
SUBJECT TO AMENDMENT
WITHOUT NOTICE
WORK ORDER
NO. 88950 MCT
12/08/13

RELEASED
05.11.28RH
ECN 1105**UNDER REVIEW**07.11.21
PDR NICK 263**Copyright © 1995 by DART AEROSPACE LTD**


THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE LTD.

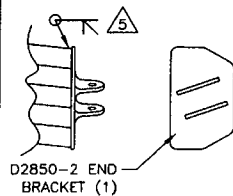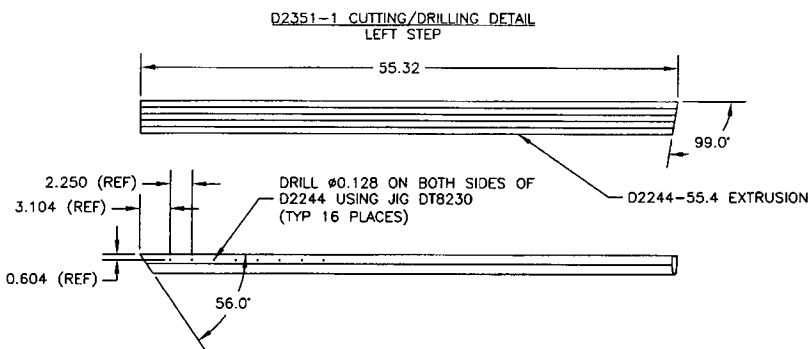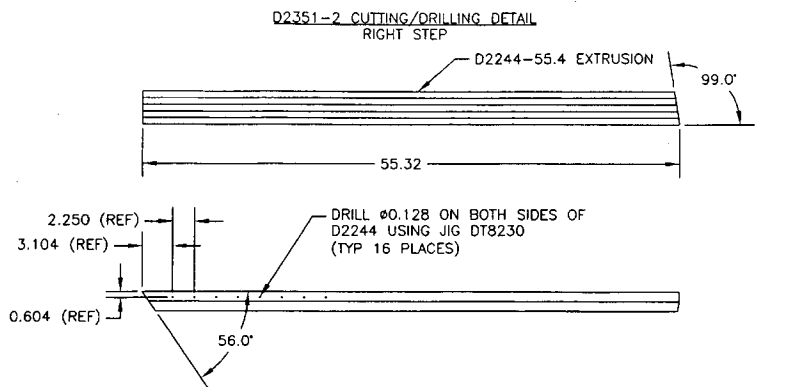




DETAIL A
SCALE: 1:4

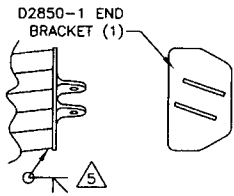

DETAIL B
SCALE: 1:4



- GENERAL NOTES
- 1) WELD PER DART QSI 004
 - 2) FINISH: CHEMICAL CONVERSION COAT PER DART QSI 005 4.1
POWDER COAT GLOSS WHITE (4.3.5.1) PER DART QSI 005 4.3
BLACK ANTI-SKID PAINT PER DART QSI 005 4.4
 - 3) ALL DIMENSIONS ARE IN INCHES
 - 4) TOLERANCES ARE PER DART QSI 018 UNLESS OTHERWISE NOTED
- 5 CHAMFER D2244 EXTRUSION 0.075"x45° BEFORE WELDING D2850-1 OR D2850-2 IN PLACE. DO NOT GRIND FLUSH.

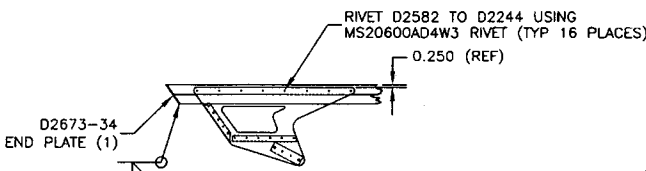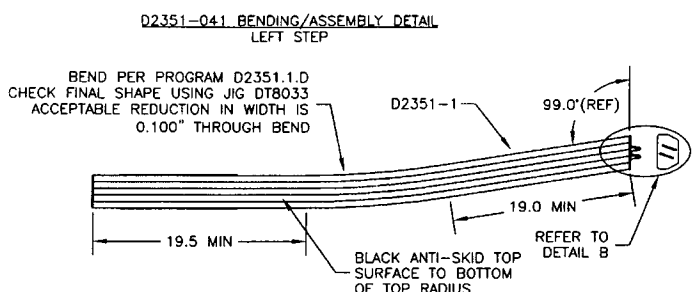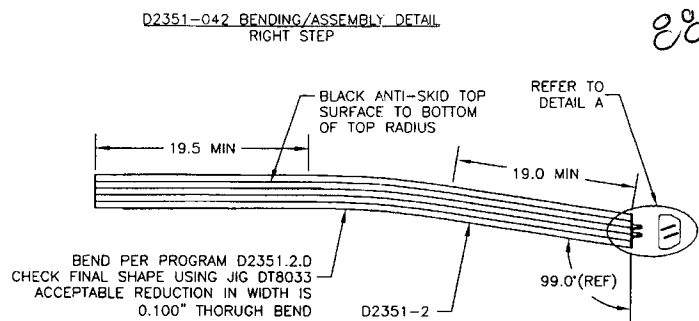

RELEASED
05.11.28

UNDER REVIEW

COPYRIGHT © 1995 BY DART AEROSPACE LTD.

THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL
AND IS SUPPLIED ON THE EXPRESS CONDITION
THAT IT IS NOT TO BE USED FOR ANY PURPOSE
OR COPIED OR COMMUNICATED TO ANY OTHER
PERSON WITHOUT WRITTEN PERMISSION FROM
DART AEROSPACE LTD.

DESIGN	DRAWN BY	DART	DART AEROSPACE LTD. THAMESBURY, GLOUCESTERSHIRE, ENGLAND
KE	PH		
CHECKED	APPROVED	DRAWING NO.	REV. E
		D2351	SHEET 2 OF 2
DATE		TITLE	SCALE
05.11.14		HIGH FLOAT STEP ASSEMBLY	1:12

